



Sleeving Instruction


Apply the same color sleeves to the same kite line to help you identify the left and right line during kite installation.

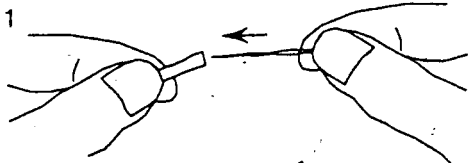


Insert the provided tool through the sleeve.

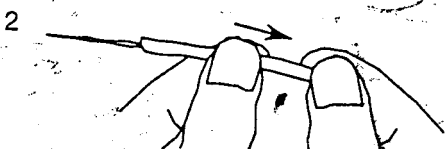


Slide the sleeve over the tool until the point protrudes.

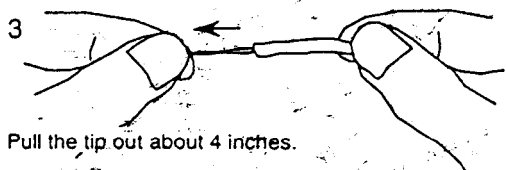


Pull the tip out about 4 inches.

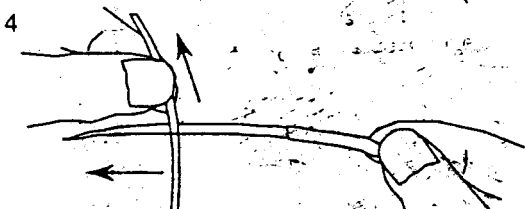


Thread the kite line through the tool and slide it to the tip.

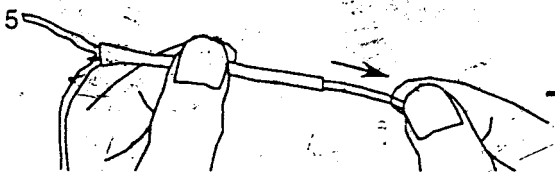

Slide the sleeve off the tool and over the kite line completely and remove the tool.

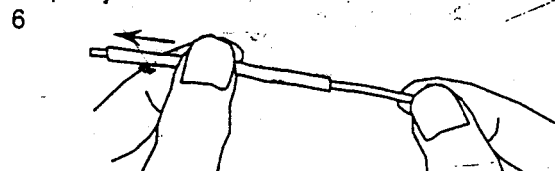

Slide the sleeve toward the end of kite line until it is almost flush with the sleeve.

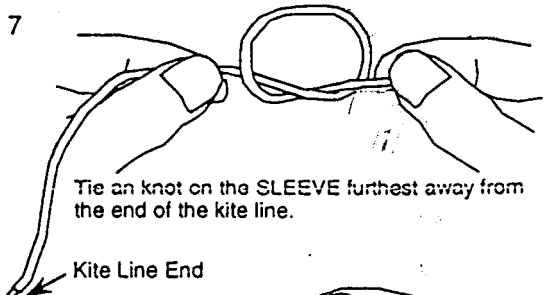

Tie an knot on the SLEEVE furthest away from the end of the kite line.



Tie another knot on the SLEEVE so a loop is formed at the end.

Repeat this process for all 4 sleeves